

Notice and request

1 . Length of power supply cable ・ signal cable


From connection of power supply or signal cable to floor is about 1m.

② From vacuum device to die casting machine control panel.

③ From connection of metal connector to floor.

Length of cable = ① + ② + ③

※ The length from breaker or socket of power supply cable to floor need to be considered.

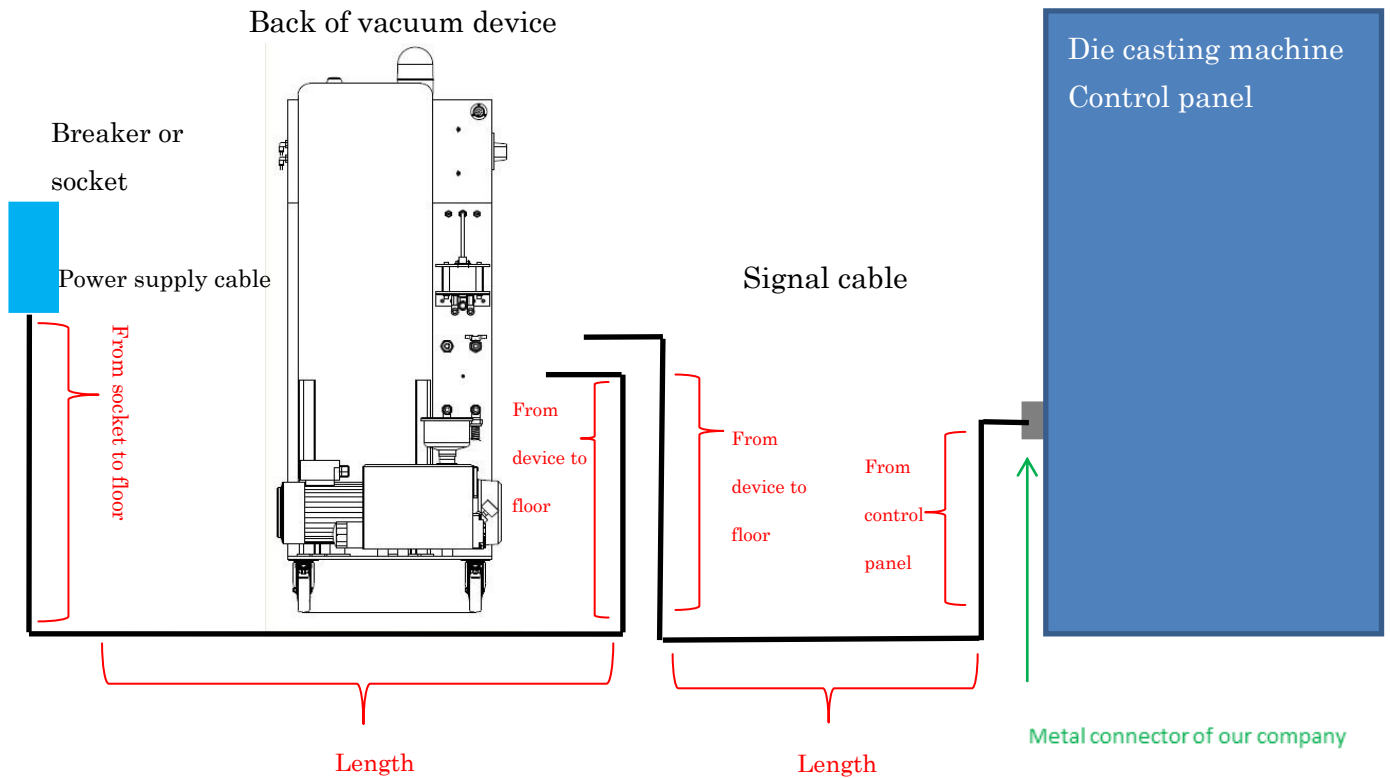

2 . Chill vent connection of other company

Vacuum suction tube of vacuum device

For chill vent : ϕ 12 tube (Model : TS1209B)

If chill vent or vacuum valve of other company is used, please refer to above information and contact with us for purchase.

The model of tube can be changed according to actual need, please contact with us.

